





# LOW VOLTAGE ENERGY STORAGE SYSTEM — FOR RESIDENTIAL AND SME

## US2000B Bracket

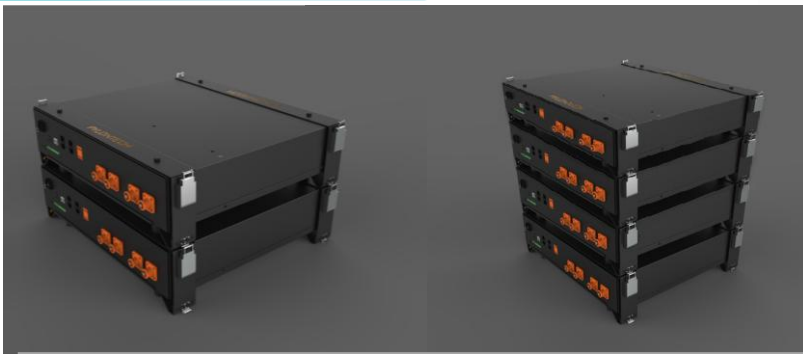


US2000B Bracket is for 1~4 Phantom-S batteries installation.  
One or two batteries can be side long stacked.



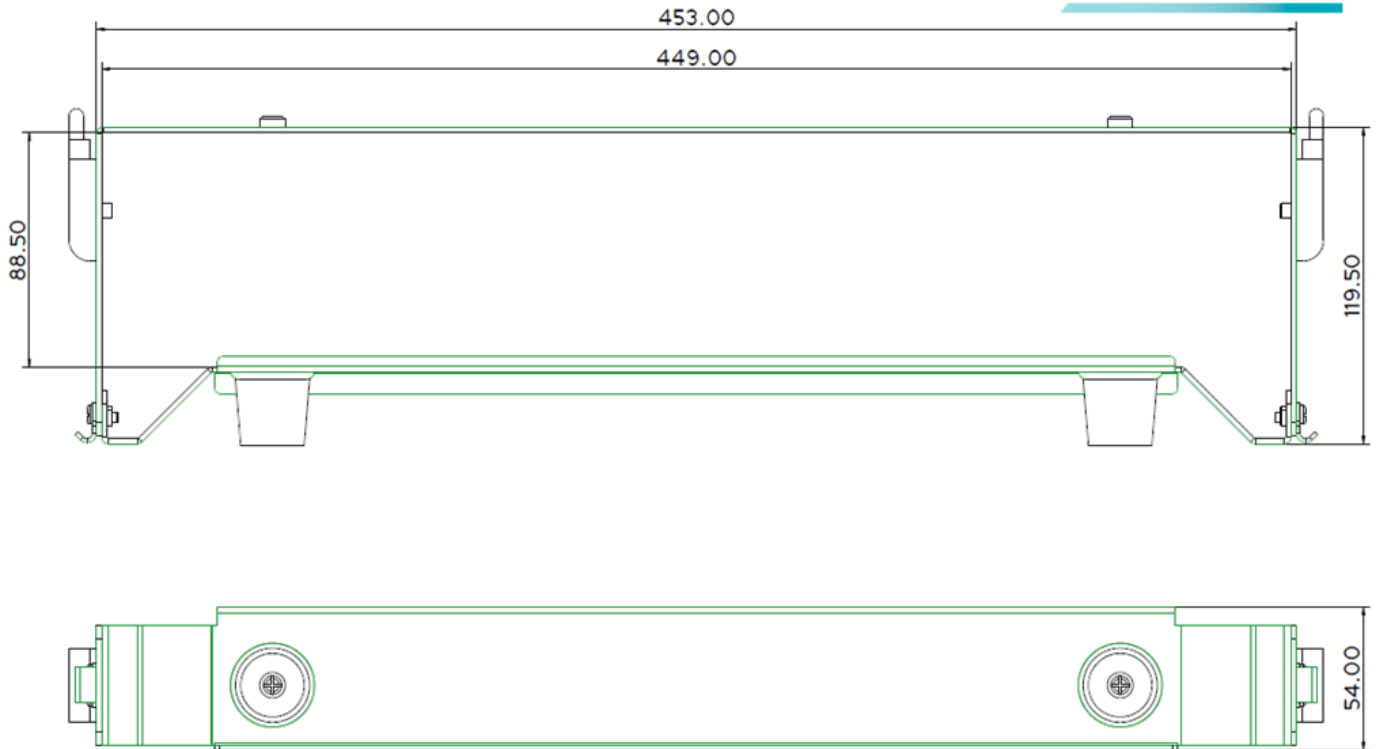


# Installation


1. Dismantle the 2 tabs on the battery.

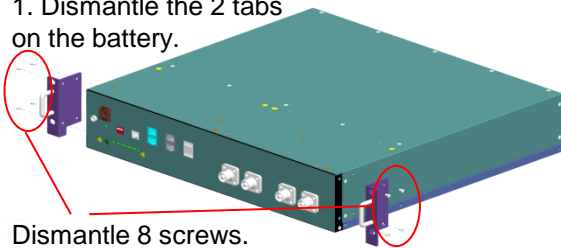

2. Set the battery into 2 pcs **Phantom Plus** from front and back.

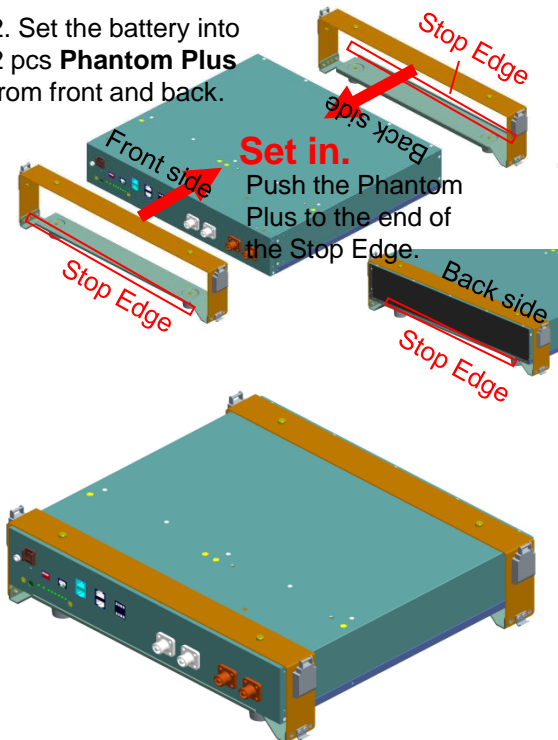

3. Stack the batteries together.

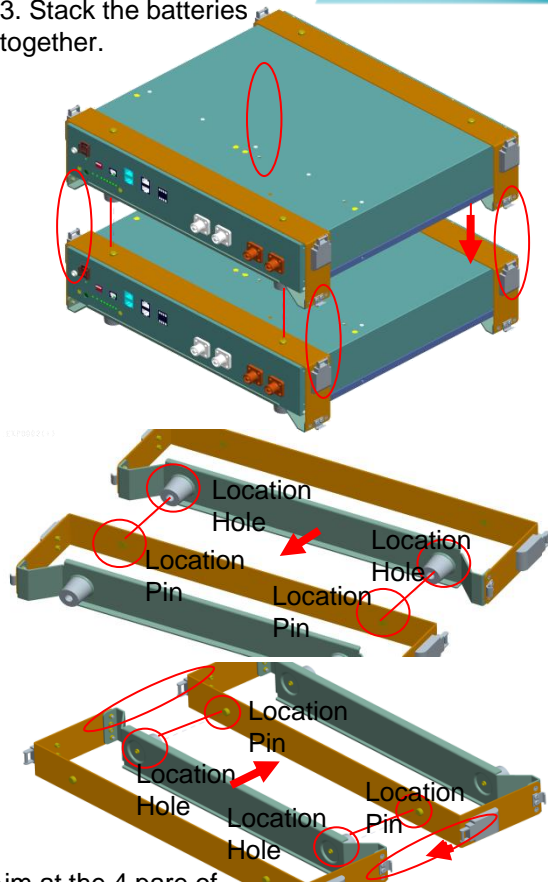

Aim at the 4 pare of Location Pin and Location Hole, stack the batteries together. And hasp the 4 agraffes together.

